



## Fentanyl PTD test - instruction insert

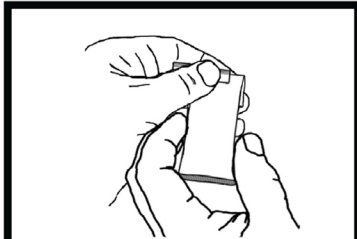


1. Remove clip off the pouch by sliding it off the pouch.

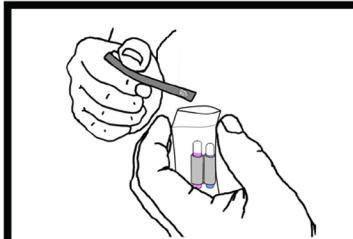


2. Place sample into pouch opening, using the spatula enclosed. Put powder quantity that fits in circle shown in table. Close the pouch by folding down the top of the pouch, then place the clip over the folded pouch.




3. Tap gently a few times on the lower corner of pouch on a hard surface, so the sample gathers in the lower corner of the pouch.

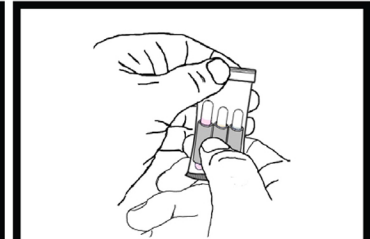


4. Break ampoules from left to right, one at a time by pressing firmly on the center of the plastic holder of the ampoules. Press just enough to break the glass: Do not crush glass, as this may cause glass to penetrate the pouch.

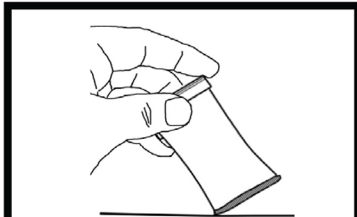

5. Agitate pouch by flicking side with a finger after each ampoule is broken.

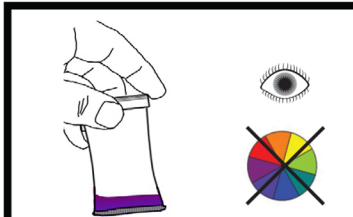

6. Observe the color results during the first 60 seconds after crushing all ampoules. For best results, hold pouch at a slant when viewing color change (important if layered colors). View color changes against a neutral colored background. Sunlight or bright lighting is best for viewing color changes.

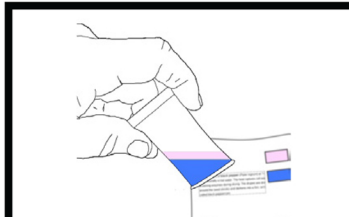

7. Compare the color that develops immediately to the color chart.



8. Dispose of pouch according to law and regulations and agency procedures.